## CHECK NUMBERS STAMPED ON PARTS WITH NUMBERS SPECIFIED IN CONTENTS OF KIT

- 1. Install mounting plate on tailshaft. Tighten all bolts securely.
- Install back-up light switch bracket on shifter on 3rd gear stop bolt. The back-up light switch is available from your local dealer, Install the switch in the hole in the bracket. Fasten with the nut supplied.
- Insert nylon bushings into arms. Assemble hooked ends of rods into arms and secure with spring clips. Check Assembly View for proper combination of parts.
- Thread rad adjusting buttons onto rads. Spin buttons anto middle of thread length.
- Install arm-rod-button assemblies onto transmission shafts. Refer to Assembly View for proper part combinations. Fasten arms onto shafts with stock flatvashers, lockwashers and nuts.
- Insert nylon bushings into holes in levers refer to Assembly View.
   Align levers with Shifter frame and insert neutral alignment rod (Pt. 1725) through notches in frame and holes in levers.
- Rotate transmission armsbackward and forward. The neutral position for each arm can be felt at the mid-position of full travel. Reverse arm must be moved to the end of its travel toward the front (dis-reaposed position).
- Adjust positions of button on each rod to permit easy slip-in fit of button into nylon bushing in proper lever. TEANSMISSION ARMS MUST REMAIN IN NEUTRAL POSITION WHILE ALIGNMENT IS ACCOMPLISHED. Foster buttons in levers with spring clips.
- Remove neutral alignment rod. Test Shifter. Stick should move freely from side to side at neutral (between 1-2 and 3-4 shifting paths). An increased pull toward the operator should engage the revens lever. If Shifter functions properly, proceed to paragraph

If the stick CANNOT be moved freely between 1-2 to 3-4 or reverse path, one more of the not button ediptiments must be corrected. Move stick forward to 3rd, then book to 4th, then into neutral: insert neutral olignment rod. If not CANNOT be inserted freely, the 3-4 not button is incorrectly adjusted. Similar setting of 1-2 kith will prove alignment of 1-2 rod adjustment.

To check reverse rod button adjustment, place stick at neutral. Disconnect reverse rod adjusting button from reverse lever. Grosp rod and push toward front of car. (Reverse am is dis-engaged when at end of forward trovel.) Adjust rod button for easy slipin fit in bushing. Re-assimble and fasten with spring city.

10. Adjust Shifter stop bolts. Back both bolts out of shifter frame until only a few threads remain engaged. Push stick firmly into 3rd gear and hold. Scree 3rd gear stop bolt in until contact is fell. Back bolt out one turn and tighten lock nut. Pull stick firmly back into 4th gear, serve 4th gear stop bolt in until contact is made, then back stop bolt out one turn and tighten lock-

Adjust back-up light switch bracket to depress switch plunger when reverse lever if fully engaged, Adjust position of bracket by loosening stop bolt jam nut and sliding bracket up or down. The switch plunger should have about 1/16" free travel left when the reverse lever is at the end of its travel. DO NOT ALLOW SWITCH PLUNGER TO "BOTTOM."

FILL OUT GUARANTEE CARD COMPLETELY AND RETURN PROMPTLY

