

16. ARM

17. ROD

20. ARM

21. ROD

22. ARM

23. ROD

15

1st - 2nd

1st - 2nd

3rd - 4th

3rd - 4th

25. ROD ADJUSTING BUTTON

26. NEUTRAL ALIGNMENT ROD

REVERSE

REVERSE 24. SWITCH ACTIVATING ARM

18. NYLON BUSHING 19. SPRING CLIP

27. SPACER BLOCK

BAGGED HARDWARE Pt. 154 7922

*Spacer block used in console installation only

Pt. 105 4293

Pt. 213 4187

Pt. 213 4188

Pt. 105 7923

Pt. 213 4335

Pt. 105 4182

Pt. 228 8397*

Pt. 119 3783 (3) Pt. 148 1725

Pt. 118 1681 (6)

Pt. 127 2412 (6) Pt. 105 4294

CHECK THE PART NUMBERS STAMPED ON ALL PARTS RECEIVED WITH KIT WITH THE PART NUMBERS SPECIFIED

- 1. Remove stock linkage, shifter and brackets from transmission. Remove backdrive rod: om Reverse arm ONLY.
- Install mounting bracket by starting the two stock bolts in the forward mounting ears of the bracket. Do not tighten these bolts.
- 3. Install shifter on mounting bracket. Install the shifter mounting bolts in the shifter after you have maneuvered stick through the opening in the floor tunnel. Fasten the rear of the bracket with the 'U' clamp. Tighten the two bolts that fasten the forward end of the bracket to the transmission. Tighten the two bolts that fasten the shifter to the bracket.
- 4. Install stick on shifter.

CONSOLE CARS ONLY

Remove center console plate. Install spacer block between stick and shifter. IMPORTANT: CENTER MARK ON SPACER MUST FACE SHIFTER (toward driver). Tighten mounting bolts.

- Insert nylon bushings into holes in levers refer to assembly view. Align levers with shifter frame and insert neutral alignment rod (Pt. 1725) through notches in frame and holes in levers.
- Rotate transmission arms backward and forward. The neutral
 position for each arm can be felt at the mid-position of full
 travel. Reverse arm must be moved to the end of its travel
 toward the front of car (dis-engaged position).
- *8. Adjust positions of button on each rod to permit easy slip-in fit of button into nylon bushing in proper lever. TRANS-MISSION ARMS MUST REMAIN IN NEUTRAL POSITIONS WHILE ALIGNMENT IS ACCOMPLISHED. Fasten buttons in levers with spring clips.
- Remove neutral alignment rod. Test shifter. Stick should move freely from side to side at neutral (between 1-2 and 3-4 shifting paths). An increased pull toward the operator should engage the reverse lever. If shifter functions properly, proceed to paragraph 10.

If the stick CANNOT be moved freely between 1-2 to 3-4 or reverse path, one or more of the rod button adjustments must be corrected. Move stick forward to 3rd, then back to 4th, then into neutral. Insert neutral alignment rod. If rod CANNOT be inserted freely, the 3-4 rod button is incorrectly adjusted. Similar testing of 1-2 shift will prove alignment of 1-2 rod adjustment.

To check reverse and button adjustment, place stick at neutral. Preparet reverse rod adjusting button from reverse lever. Grasp rod and push all the way toward front of car. Adjust rod button for easy slip-in fit in bushing. Re-assemble and farten with spring clip.

- 10. Adjust shifter stop bolts. Back both bolts out of shifter frame until only a few threads remain engaged. Push stick firmly into 3rd gear and hold. Screw 3rd gear stop bolt in until contact is made. Back boltout one turn and tighten jam nut. Pull stick firmly back into 4th gear, screw 4th gear stop bolt in until contact is made, then back stop bolt out one turn and tighten jam nut.
- Install stock backdrive rod in hole provided in the Hurst Reverse arm. Fasten with stock clip.

NOTE — After installation has been completed, check to be sure that the column lock functions properly. If backdrive does not lock column, or if shifter cannot be put into REVERSE adjust backdrive linkage at lower end of column rod.

WARNING

THIS TRANSMISSION DOES NOT HAVE AN INTER-LOCK TO PREVENT ENGAGEMENT OF THE REVERSE GEAR WHEN ANY OF THE FORWARD GEARS ARE ENGAGED. SEVERE DAMAGE TO THE TRANSMISSION WILL RESULT IF THIS SHOULD OCCUP. DOUBLE-CHECK THE LINKAGE BEFORE STARTING THE ENGINE OR MOVING THE CAR. INSERT NEUTRAL ALIGNMENT ROD (Pt. 1725) THROUGH LEVERS AND CHECK POSITIONS OF TRANSMISSION SHIFT-ING ARMS. 1–2 AND 3–4 TRANSMISSION CONTROL ARMS MUST BE AT NEUTRAL POSITIONS OF THEIR TRAVEL. REVERSE GEAR CONTROL ARM MUST BE AT FORWARD END OF ITS TRAVELIDIS—ENGAGEDI.



Install spacer 8397) betwee shifter – ¢ent block must fa

